

Table Of Contents Table of Contents..i.

Doing so might cause your camcorder to malfunction. Take images of the sun only in low light conditions, such as at dusk Use the camcorder in accordance with local regulations. Do not use or store the camcorder and accessories in the following locations: Anywhere extremely hot, cold or humid. They may malfunction or become deformed. Near strong magnetic fields or mechanical vibration. The camcorder may malfunction. Near strong radio waves or radiation. The camcorder may not be able to record properly. Near tuner devices such as TVs or radio. On a sandy beach or anywhere dusty. If sand or dust gets in your camcorder, it may malfunction. Sometimes this malfunction cannot be repaired. Near windows or outdoors, where the LCD screen, or the lens may be exposed to direct sunlight. This damages the LCD screen. Operate your camcorder on DC 6. For DC or AC operation, use the accessories recommended in these operating instructions. Do not let your camcorder get wet, for example, from rain or sea water. If your camcorder gets wet, it may malfunction. If any solid object or liquid gets inside the casing, unplug your camcorder and have it checked by a Sony dealer before operating it any further. Avoid rough handling, disassembling, modifying, physical shock, or impact such as hammering, dropping or stepping on the product. Be particularly careful of the lens. Keep the LCD screen closed when you are not using your camcorder. Do not wrap your camcorder with a towel, for example, and operate it. Doing so might cause heat to build up inside. When disconnecting the power cord mains lead , pull it by the plug and not the cord. Do not damage the power cord mains lead such as by placing anything heavy on it. Do not use a deformed or damaged battery pack. Keep metal contacts clean. If the battery electrolytic liquid has leaked: Consult your local authorized Sony service facility. Wash off any liquid that may have contacted your skin. If any liquid gets in your eyes, wash with plenty of water and consult a doctor. When not using your camcorder for a long time To keep your camcorder in optimum state for a long time, turn it on and let it run by recording and playing back images about once a month. Use up the battery pack completely before storing it. In this case, an indicator appears on the LCD screen. Notes on charging through the USB cable Operation with all computers is not assured. If you connect the camcorder to a laptop computer that is not connected to a power source, the battery of the laptop computer will continue to use up its charge. Do not leave the camcorder connected to a computer in this manner. Charging with a personally assembled computer, with a converted computer, or through a USB hub are not guaranteed. The camcorder may not function correctly depending on the USB device which is used with the computer. When the camcorder is connected to a computer or accessories Do not try to format the recording media of the camcorder using a computer. If you do so, your camcorder may not operate correctly. When connecting the camcorder to another device with communication cables, be sure to insert the connector plug in the correct way. Pushing the plug forcibly into the terminal will damage the terminal and may result in a malfunction of the camcorder. When the camcorder is connected to other devices through a USB connection and the power of the camcorder is turned on, do not close the LCD panel. The image data that has been recorded may be lost. Notes on optional accessories We recommend using genuine Sony accessories. Active Interface Shoe The Active Interface Shoe supplies power to accessories such as a video light, a flash, or a microphone sold separately. The accessory can be turned on or off as you open or close the LCD screen of your camcorder. Refer to the operating instructions supplied with your accessory for details. The Active Interface Shoe has a safety device for fixing the installed accessory securely. To connect an accessory, press down and push it to the end, and then tighten the screw. To remove an accessory, loosen the screw, and then press down and pull out the accessory. When you are recording movies with an external flash sold separately connected to the accessory shoe, turn off the power of the external flash to prevent charging noise being recorded. You cannot use an external flash sold separately and the built-in flash at the same time. When an external microphone sold separately is connected, it takes precedence over the built-in microphone. Point the Wireless Remote Commander towards the remote sensor to operate your camcorder. When no commands have been sent from the Wireless Remote Commander within a certain period, the light blue frame disappears.

DOWNLOAD PDF SONY HDR-CX250 MANUAL

Chapter 2 : CX Handycam® with Exmor R, CMOS sensor | HDR-CX | Sony US

SONY Handycam HDR-CX Manuals Manuals and User Guides for SONY Handycam HDR-CX We have 4 SONY Handycam HDR-CX manuals available for free PDF download: Operating Manual, Owner's Manual, Operation Manual.

Chapter 3 : Sony HDR-CX user manual - racedaydvl.com - Solve your problem

View and Download SONY Handycam HDR-CX operation manual online. Digital HD Video Camera Recorder. Handycam HDR-CX Camcorder pdf manual download. Also for: Handycam hdr-pjv, Handycam hdr-cxv, Handycam hdr-pj, Handycam hdr-cxv, Handycam hdr-pjv, Handycam hdr-pj

Chapter 4 : Sony Full HD Flash Camcorder HDR-CX user manual - racedaydvl.com - Solve your problem

Our goal is to provide you with a quick access to the content of the user manual for Sony HDR-CX Using the online preview, you can quickly view the contents and go to the page where you will find the solution to your problem with Sony HDR-CX

Chapter 5 : HDR-CX/CXV/CXV/PJ/PJV/PJ/PJV/PJ/PJV/XRV | "Handycam" User Guide

Use this manual if you encounter any problems, or have any questions about the camcorder.

Chapter 6 : Sony Handycam HDR-CX Specs - CNET

View full Sony Handycam HDR-CX specs on CNET.

Chapter 7 : Sony Camcorder HDR-PJ User Guide | racedaydvl.com

Find Downloads, Manuals, Tutorials, FAQ (Frequently Asked Questions), Tips & Tricks, How to's, Firmware, Drivers, Software, Problem Solving about HDR-CXE.

Chapter 8 : SONY HANDYCAM HDR-CX OPERATION MANUAL Pdf Download.

Sony eSupport - Model Support. Don't miss what's new. Be among the first to get the latest Sony news in your inbox.

Chapter 9 : Sony Handycam HDR-CX Manuals

About this manual, illustrations and on-screen displays. The example images used in this manual for illustration purposes are captured using a digital still camera, and therefore may appear different from images and screen indicators that actually appear on your camcorder.